

ark Auto Lock Cylinder Installation and Removal



No tools are required to install or remove the lock cylinder.

Installing without the key

1. Open the key safe lock cover.
2. Press down the latch on the lock cylinder.
3. Insert the lock cylinder into the key safe.
4. Rotate the lock cylinder gently to the right and left until you hear it click into place.




Installing using the key

1. Open the key safe lock cover.
2. Insert the key into the lock cylinder and rotate it 180° clockwise.
3. Push the lock cylinder into the key safe. You will hear a click- this indicates it is properly installed.
4. Rotate the key back to its original position, 180° anticlockwise.
5. Remove the key from the lock cylinder.

Removing the lock cylinder

1. Open the key safe lock cover.
2. Put the key into the lock cylinder and rotate it to 180° clockwise.
3. Open the key safe
4. Press the latch on the back of the lock cylinder and pull it out.

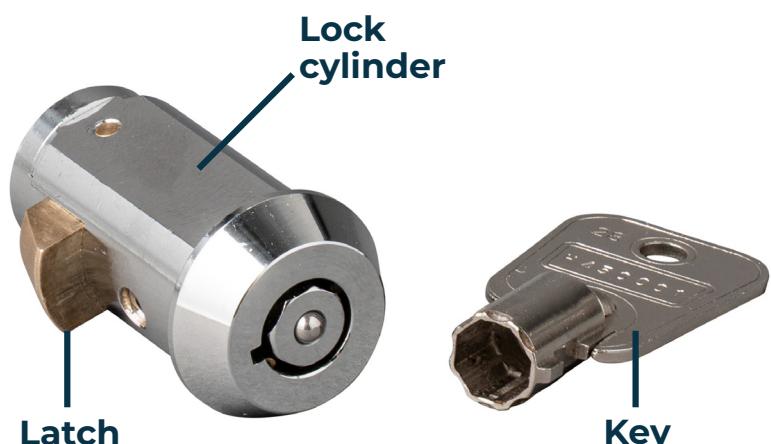

If you have further questions email sales@ark.life
or call 0330 363 0303

